

TECHNICAL DATA SHEET

- Jointing Systems
- Polythene Builders Film
- Formwork
- Formworking Accessories
- Nails
- Tie Wire
- Loop Ties
- Waterproofing

SUPPLIED BY:

Allcon Group Pty Ltd
P: 1300 255 266
E: sales@allcongroup.com.au
W: www.allcongroup.com.au

Set-Up PVC Keyjoint Former

DESCRIPTION


PVC keyjoint former is ideal for establishing key joints in concrete pavements, particularly in checkerboard layouts.

FEATURES & BENEFITS

- Made from PVC - will not rot or corrode away
- Light weight - easy to handle
- Reusable
- Fixed to timber formwork with regular clouts
- Easy removal from concrete

ESTIMATING & SIZES

Available in 80mm and 110mm. Supplied in 3m Lengths.
See below diagrams.

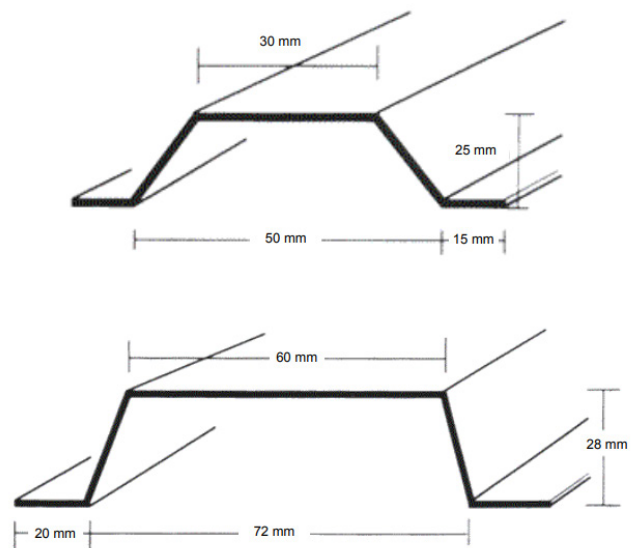

INSTALLATION INSTRUCTIONS

PVC Keyjoint Former should be positioned in the middle of the slab thickness and is simply nailed through the edge strip of the former to the timber formwork with short clouts.

After pouring the concrete and allowing for sufficient curing, the edge of the formwork is removed including the PVC Keyjoint Former.

DISCLAIMER

Set-Up products are manufactured to the highest quality, and if used in the correct applications and in accordance with all directions, will produce quality and consistent results. However Allcon Group Pty Ltd accepts no responsibility for inappropriate usage or faulty workmanship by the end user.

Product: Set-Up Keyjoint former

Issue Date: 30 Jan 2018