

Bullfloat Handles & Adaptors

DESCRIPTION

Bullfloat handles clip on to a range of concreting tools such as bullfloats, walking trowels, fresno's finish brooms groovers etc. There are two types of bullfloat handle - Telescopic or Clip handle.

TECHNICAL DATA SHEET

- Bullfloats
- Bullfloat Handles
- Concrete Rakes
- Edgers
- Finish Brooms
- Fresno Trowels
- Floats
- Kerb Profiles & Tools
- Kneeling Boards
- Peg Pullers
- Pointed Trowels
- Screeds
- Tape Measures
- Walking Trowels



Boston Clip Handle



Boston Telescopic Handle

FEATURES & BENEFITS

- Connects to most brands of concrete tools
- Reach up to 5m
- Clip handles available in both 35mm and 45mm Diameter
- Exclusive to Allcon



35mm Clip Adaptor



Telescopic Adaptor



Walking Adaptor

CODE	DESCRIPTION	LENGTH
BFEFCH1835	Boston Clip Handle 35mm	1.8m
BFEFCH1845	Boston Clip Handle 45mm	1.8m
BFBOSTELE	Boston Telescopic Handle	2.75-5m
BFEFADL	Boston 35mm Clip Adaptor	-
BFBOSAD	Boston Telescopic Adaptor	-
EXSLA	Boston Walking tool adaptor	-
BFEFSC	Boston Spring Clip	-

Continued over Page



45mm Boston Clip Handle

NO ADAPTER REQUIRED:



Boston Finish Brooms

- FBEFSC
- FBEFMC
- FBEFFC

CLIP ADAPTOR REQUIRED



Boston Bull Floats

- BFEF900
- BFEF1200
- BFEF1500
- BFEF1800



Boston Walking Trowels

- WTEF600C
- WTEF900C
- WTEF1200C



Boston Walking Trowel

- WTEF600TS



Boston Fresno Trowel

- FTEF600
- FTEF900
- FTEF1200
- FTEF1500

**TECHNICAL
DATA SHEET**

- Bullfloats
- Bullfloat Handles
- Concrete Rakes
- Edgers
- Finish Brooms
- Fresno Trowels
- Floats
- Kerb Profiles & Tools
- Kneeling Boards
- Peg Pullers
- Pointed Trowels
- Screeds
- Tape Measures
- Walking Trowels

Continued over Page

TECHNICAL DATA SHEET

- Bullfloats
- Bullfloat Handles
- Concrete Rakes
- Edgers
- Finish Brooms
- Fresno Trowels
- Floats
- Kerb Profiles & Tools
- Kneeling Boards
- Peg Pullers
- Pointed Trowels
- Screeds
- Tape Measures
- Walking Trowels

TELESCOPIC HANDLE CONNECTIONS



Boston Telescopic Handle

The Boston telescopic handle comes with a telescopic adaptor. However, many contractors prefer to have an adaptor on each tool so they can quickly change between tools rather than un-doing the bolt & wingnut.

TELESCOPIC ADAPTOR WITHOUT MODIFICATION



Boston Bull Floats

BFEF900
BFEF1200
BFEF1500
BFEF1800



Boston Fresno Trowel

FTEF600
FTEF900
FTEF1200
FTEF1500




Boston Walking Trowel

WTEF600TS

TELESCOPIC ADAPTOR WITH ADDITIONAL SPRING CLIP

The Boston telescopic adaptor features two holes at one end, the first one will contain the bolt and wing nut. If you insert a spring clip into the second hole, this adaptor will connect to almost any walking tool.

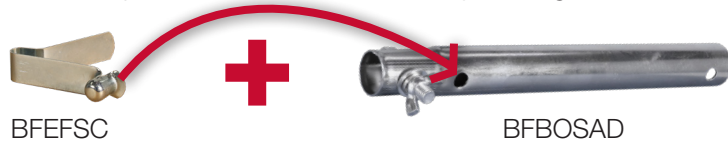

BFEFSC

BFBOSAD



Boston Finish Brooms

FBEFSC
FBEFMC
FBEFFC



Boston Walking Trowels

WTEF600C
WTEF900C
WTEF1200C

45mm CLIP HANDLE CONNECTIONS



Boston 45mm Clip Handle

The Boston 45mm clip handle will only fit specialised tools such as bump cutters, channel floats and check rods.



Bump Cutter
BCB30



Check Rod
CRB24, CRB30



Channel Float
CFB24, CFB30

WALKING ADAPTOR



The EXSLA walking adaptor comes standard on Boston walking trowels to suit clip handles. Should they be damaged, the EXSLA adaptor can simply be replaced.

The EXSLA walking adaptor also fits on many other walking tools such as walking stipples, groovers and edgers.



Boston Walking Trowels

WTEF600C
WTEF900C
WTEF1200C

DISCLAIMER

Boston products are manufactured to the highest quality, and if used in the correct applications and in accordance with all directions, will produce quality and consistent results. However Allcon Group Pty Ltd accepts no responsibility for inappropriate usage or faulty workmanship by the end user.

Product: Boston Bullfloat Handles & Accessories
Issue Date: 8 March 2023



TECHNICAL DATA SHEET

- Bullfloats
- Bullfloat Handles
- Concrete Rakes
- Edgers
- Finish Brooms
- Fresno Trowels
- Floats
- Kerb Profiles & Tools
- Kneeling Boards
- Peg Pullers
- Pointed Trowels
- Screeds
- Tape Measures
- Walking Trowels

P: 1300 ALLCON (255 266)
E: sales@allcongroup.com.au

www.allcongroup.com.au